 
 


## Hotone USB ASIO Driver User Guide

 
1. Power on your Hotone audio device (e.g. Ampero) and connect it to your computer. Then install Hotone USB ASIO Driver V4.80.0.
2. Launch your DAW (take Cubase 8 Element version as an example), then click "Devices" – "Device Setup".

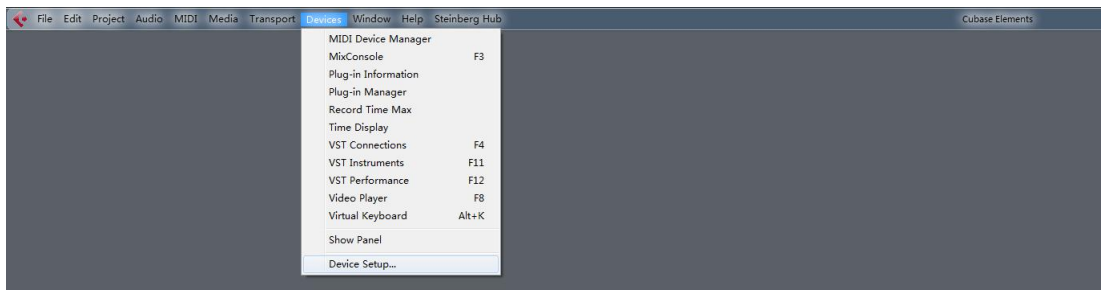

3. In "Device Setup" window, select "VST Audio System":

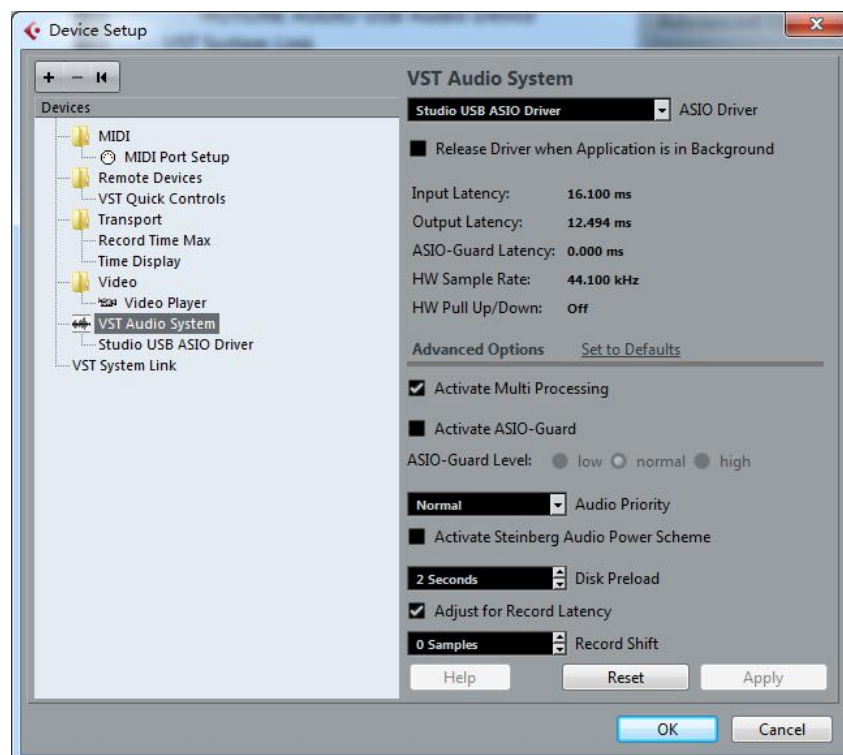

4. Find "HOTONE AUDIO USB Audio Device" in the ASIO Driver drop down menu, choose it, and click "OK".

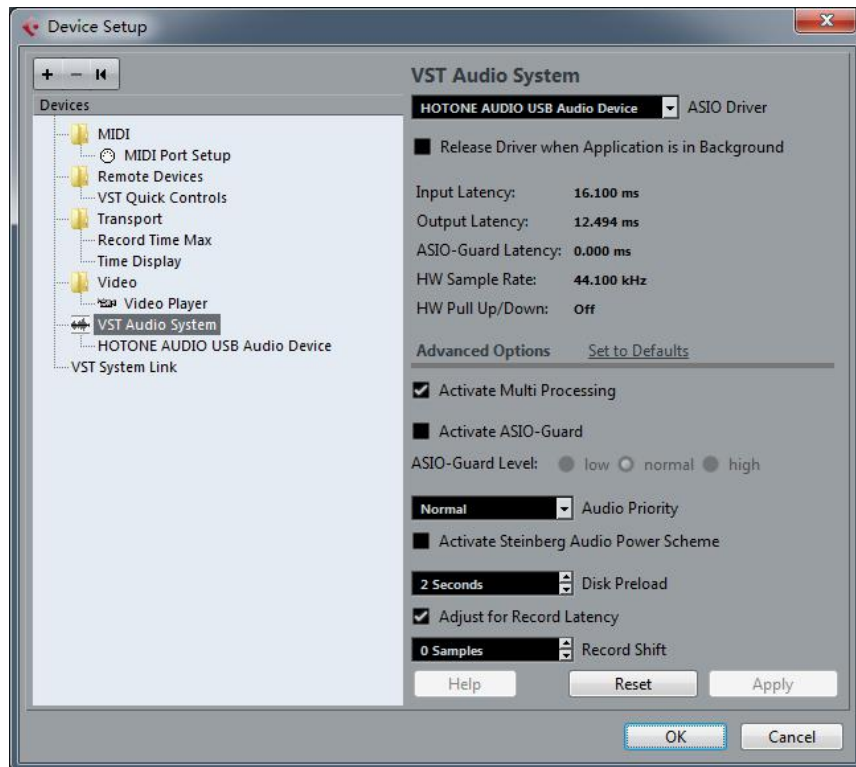

5. Rock out!