

| Operating Instruction                                   |                               | WALLYLOOPER                                       |
|---|-------------------------------|---|
| OPERATION   | FUNC./STATUS                  | LED DISPLAY                                       |
| Power on (no data)                                      | Empty                         | None  |
| Power on (with data)                                    | Stop                          | Green LEDs flash                                  |
| Tap footswitch (no data)                                | Record                        | Red LEDs light up                                 |
| Tap footswitch when recording/overdubbing               | Play                          | Green LEDs light up                               |
| Tap footswitch when playing                             | Overdub                       | Red LEDs light up                                 |
| Hold footswitch when playing                            | Undo/Redo<br>(last recording) | Green LEDs flash fast                             |
| Tap footswitch twice when playing/recording/overdubbing | Stop                          | Green LEDs flash                                  |
| Hold footswitch when stopped                            | Delete                        | Green LEDs flash fast                             |
| Turn up the TEMPO when playing                          | Speed up                      | Green/Red LEDs flash successively at higher speed |
| Turn down the TEMPO when playing                        | Slow down                     | Green/Red LEDs flash successively at lower speed  |
| Recording (around 15 minutes)                           | Memory nearly full            | Red LEDs flash                                    |



